


## FREQUENCY: AFTER EACH CLIENT

### 4 Steps to Disinfection

**1** Drain water from basin and remove visible debris using detergent and water solution.

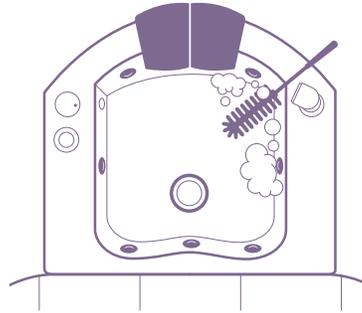


**2** Fill the basin with cool water to above jet line. Measure the volume of required Rejuvenate™ Concentrate to make a 1:16 dilution and add to basin.\*\*




1 1/2 oz of silicone-based antifoam may be added to prevent excessive foaming during circulation.

**3** Allow the foot bath to circulate with the disinfectant for 30 seconds. Turn off jets and let solution sit for 5 minutes.

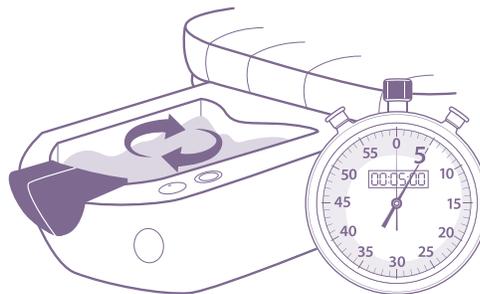

**4** Drain the foot bath and refill with clean water. Circulate and rinse for 30 seconds. Turn off the jets and drain.

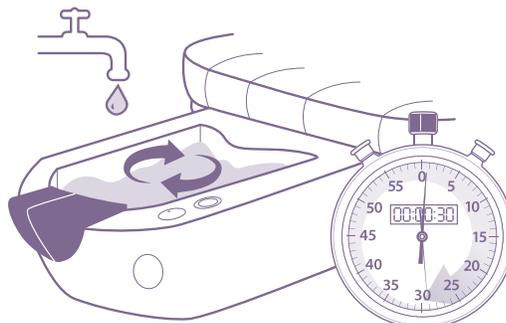

## DILUTION MADE EASY:\*

**Dilution:** 1:16

**Disinfectant:** 16oz

**Water:** 2 Gallons

For more information visit:  
[ViroxProbeauty.com](http://ViroxProbeauty.com)

\* Due to size differences of circulating foot baths, it is recommended to measure the volume of water needed to fill the foot bath to above the jet line in order to identify how much disinfectant is needed.

\*\* To ensure the proper concentration has been added to the foot bath, validate using Precise™ Test Strips.


Brought  
to you by:

**VIROX**  
TECHNOLOGIES INC.


## FREQUENCY: END OF DAY

### 5 Steps to Disinfection

**1** Drain water from basin and remove visible debris.

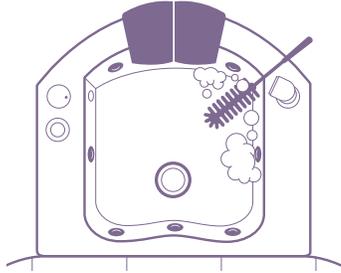

**2** Remove filter screens, jets, and all other removable parts from the basin. Using a brush, clean any trapped debris with detergent or Rejuvenate™.

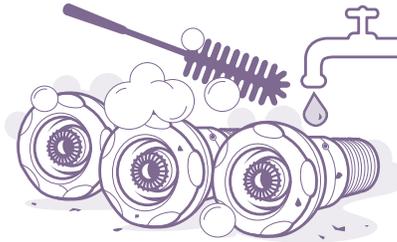


Rinse the removed parts with clean water and place back into the basin for disinfection.

**3** Fill the basin with cool water to above jet line. Measure the volume of required Rejuvenate™ Concentrate to make a 1:16 dilution and add to basin.\*\*




1 1/2 oz of silicone-based antifoam may be added to prevent excessive foaming during circulation.

**4** Allow the foot bath to circulate with the disinfectant for 30 seconds. Turn off jets and let solution sit for 5 minutes.

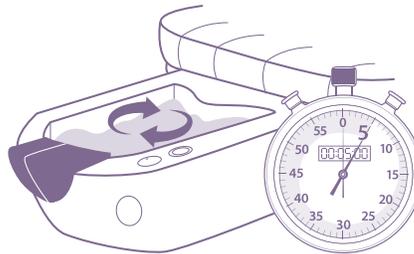

**5** Drain the foot bath and refill with clean water. Circulate and rinse for 30 seconds. Turn off the jets and drain.

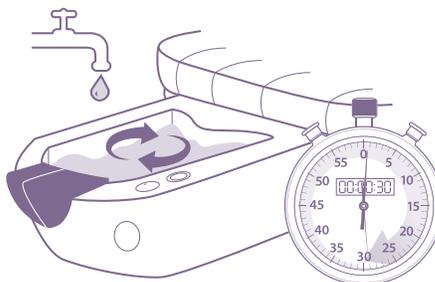

### DILUTION MADE EASY:\*

**Dilution:** 1:16

**Disinfectant:** 16oz

**Water:** 2 Gallons

For more information visit:  
[ViroxProbeauty.com](http://ViroxProbeauty.com)

\* Due to size differences of circulating foot baths, it is recommended to measure the volume of water needed to fill the foot bath to above the jet line in order to identify how much disinfectant is needed.

\*\* To ensure the proper concentration has been added to the foot bath, validate using Precise™ Test Strips.