

# QUICKSTART GUIDE

## REJUVENATE<sup>®</sup> Spray

### Where to Use Rejuvenate<sup>™</sup> Spray

Rejuvenate<sup>™</sup> Spray is an effective and convenient choice for everyday use. Spray, leave wet for as little as 1 minute and you're done.


Perfect for use on:

- Hard Non-Porous Surfaces and Equipment
- Workstations
- Chairs and Stools
- Massage Beds and Cradles
- Countertops
- Basin Footbaths
- Sink and Shampooing Areas
- Other Large Surfaces

Contact Times		
<b>1 Minute</b> Bacteria & Viruses	<b>5 Minutes</b> Mycobacteria (Tuberculocidal)	<b>10 Minutes</b> Fungi
Surface should be visibly wet for entire contact time.		

### How to Use Rejuvenate<sup>™</sup> Spray

Disinfection should take place after each and every client service or treatment to prevent the spread of germs.

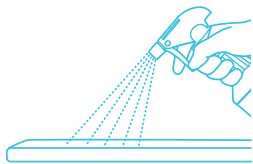

#### STEP ONE

**Thoroughly wet surface with Rejuvenate<sup>™</sup> Spray**

Remove any visible dirt or debris from surface or equipment prior to spraying.



#### STEP TWO

**Allow surface to remain visibly wet for at least 1 minute**

Allowing surfaces to remain wet for 1 minute kills viruses and bacteria. Refer to table above for additional contact times.

**AIR DRY**



#### STEP THREE

**Leave to air dry**

If desired, you may wipe excess solution using a clean cloth after the required contact time has been achieved.

### Success & Troubleshooting Tips

#### Spray and Walk Away.

Best practice is to simply apply the product and walk away, allowing to air dry.

#### Wait Before Wiping Dry.

Always follow the required contact time when disinfecting a surface for a particular pathogen. If you wish to wipe excess solution using a clean cloth, ensure you wait until after the required contact time has been achieved.

#### Always Ready-To-Use.

The solution does not require dilution or mixing with water, making it simple and saving you time. Simply attach a trigger sprayer or foamer to the bottle and you are ready to disinfect.

For more information visit:  
[LearnAboutRejuvenate.com](http://LearnAboutRejuvenate.com)

**Virox Technologies Inc.**  
2770 Coventry Road  
Oakville, ON L6H 6R1 CANADA  
Toll Free: 1-800-387-7578